

***This page contains important safety instructions to be followed when using electric devices commercialized by SC Johnson***



## **GLADE Discreet**

Version 1.0  
Revision Date 01.11.2014

**IMPORTANT SAFETY INSTRUCTIONS:** Instructions to avoid the hazards of fire, toxicity, electric shock, or injury. **PLEASE READ BEFORE USING AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.** **WARNING:** when using electrical appliances, basic precautions should always be followed including the following: **CAUTION:** to reduce risk of injury and prevent play, children shall not use product. Close supervision is necessary when a product is used near children 8 years and above or persons with special needs. For safe use, plug only into properly functioning wall outlets where device is ventilated and cannot contact bed covering or other material. Do not use with extension cords or multi-plugs. Do not immerse in water. Do not insert anything into outlet above it. Use only original refills.

Do not allow materials of any kind to cover the device while it is in use.

Do not touch device with metal instruments or wet hands.

Unplug when the refill is empty/exhausted, replace the refill only when the device is unplugged.

The device may become slightly warm while in use

Before plugging the device always check the voltage is compatible with the one reported on the unit  
For cleaning, unplug the device and use a dry cloth or paper towel.